


System alerts

If you set alerts correctly you can be informed about the changes or problems with the mNVR section System alerts:

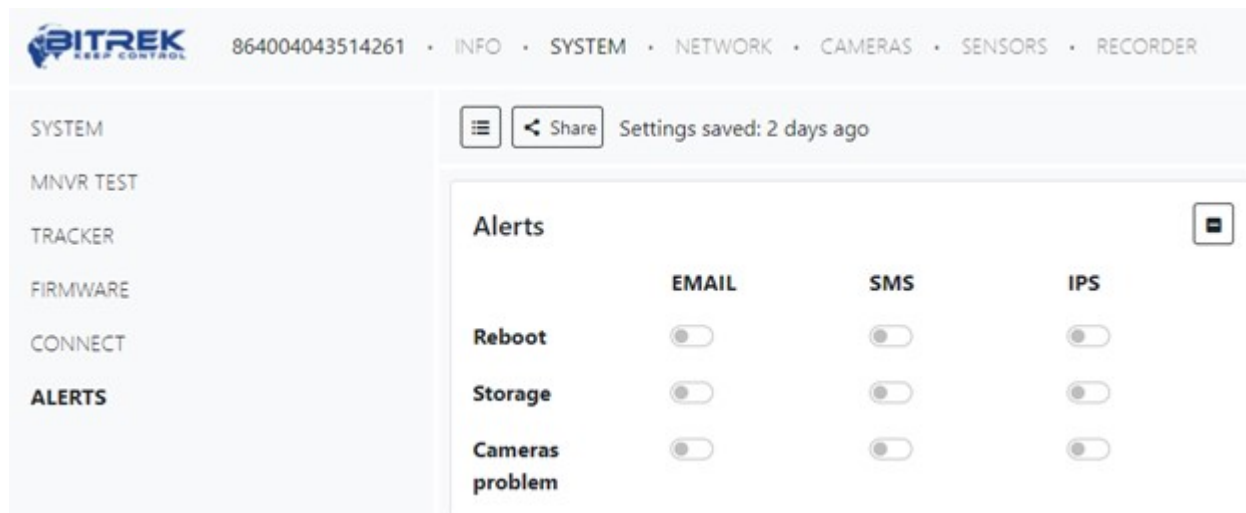

Parameter Description of System alerts:

| Parameter | Parameter Description |
|-----------------|--|
| Reboot | <p>Email: send Email to all specified in the Email section users will receive a reboot message</p> <p>SMS: send an SMS to all users specified in the GSM settings section will receive a reboot message</p> <p>IPS: send to the server via IPS reboot protocol</p> |
| Storage | <p>Email: send Email to all specified in the Email section users will receive an error message in the repository</p> <p>SMS: send an SMS to all users specified in the GSM settings section will receive an error message in the repository</p> <p>IPS: to send to the server through IPS the report on an error in storage</p> |
| All cameras off | <p>Email: send Email to all specified in the Email section users will receive a message to disable all cameras</p> <p>SMS: send an SMS to all users specified in the GSM settings section will receive a message about disabling all cameras</p> <p>IPS: send to the server via IPS protocol to disable all cameras</p> |

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

From: <https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link: <https://docs.bitrek.video/doku.php?id=en:alert&rev=1713428779>

Last update: **2024/04/18 11:26**

