


# System alerts

If you set alerts correctly you can be informed about the changes or problems with the mNVR section System alerts:

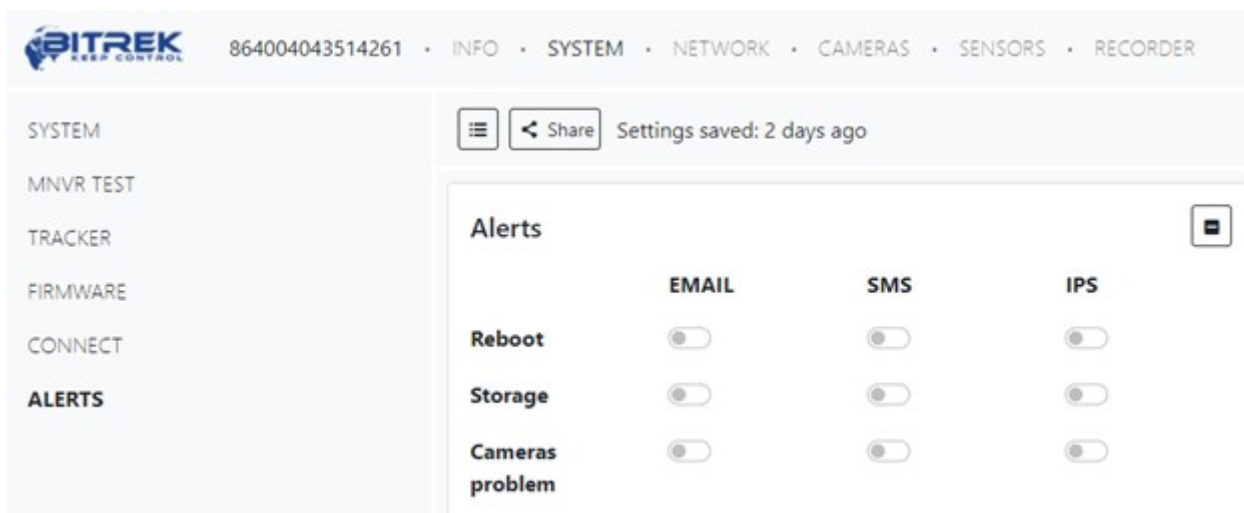

Parameter Description of System alerts:

Parameter	Parameter Description
Reboot	<p><b>Email:</b> send Email to all specified in the Email section users will receive a reboot message</p> <p><b>SMS:</b> send an SMS to all users specified in the GSM settings section will receive a reboot message</p> <p><b>IPS:</b> send to the server via IPS reboot protocol</p>
Storage	<p><b>Email:</b> send Email to all specified in the Email section users will receive an error message in the repository</p> <p><b>SMS:</b> send an SMS to all users specified in the GSM settings section will receive an error message in the repository</p> <p><b>IPS:</b> to send to the server through IPS the report on an error in storage</p>
All cameras off	<p><b>Email:</b> send Email to all specified in the Email section users will receive a message to disable all cameras</p> <p><b>SMS:</b> send an SMS to all users specified in the GSM settings section will receive a message about disabling all cameras</p> <p><b>IPS:</b> send to the server via IPS protocol to disable all cameras</p>

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

From:  
<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:  
<https://docs.bitrek.video/doku.php?id=en:alert&rev=1713428858>

Last update: **2024/04/18 11:27**

