

# How do I connect a third-party camera?

The way to connect cameras from other manufacturers basically does not differ from [connect Dahua camera](#), the only difference is that **autoinit** is designed to work specifically with Dahua cameras, so the probability of automatic connection to the device is quite small, and the camera you have to connect manually through **Advanced**

## IP camera advanced adding



Leave the field empty for the default value

Warning: Adding a camera in place of an existing one will overwrite its settings!

Camera number	1	▼
Power state	ON	▼
Sound state	OFF	▼
Name	IP camera 1	
IP	192.168.1.10	
Gateway	192.168.1.20	
Max current, mA	600	
Manufacturer	DAHUA	▼
Username	admin	
Password	admin1234	
Communication protocol	TCP	▼
HIGH link	rtsp://admin:admin1234@192.168.1.10:554/cam/realmonitor?c	
LOW link	rtsp://admin:admin1234@192.168.1.10:554/cam/realmonitor?c	
HIGH snap link	http://admin:admin1234@192.168.1.10/onvifsnapshot/media_:	
LOW snap link	http://admin:admin1234@192.168.1.10/onvifsnapshot/media_:	

Discard Save

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:cameraconnect>

Last update: **2024/04/18 12:26**