



System CONNECT

In this chapter you can set the device connection by CONNECT bus, to do that, you need to choose CONNECT bus address of the device

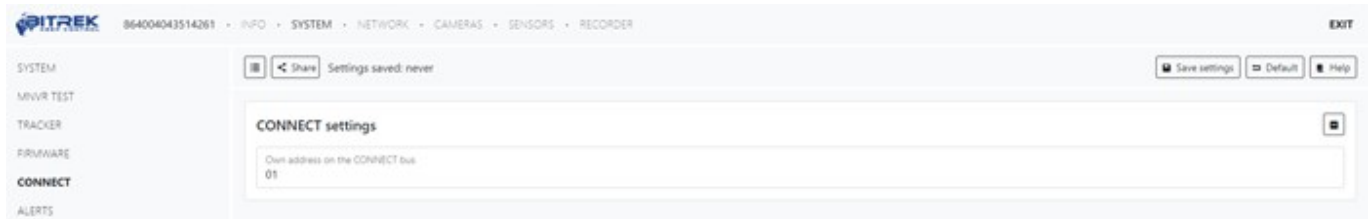

ATTENTION! Sometimes the address of devices can coincide, as the result will be conflict of the addresses and you won't be able to find out which of devices is yours, in this case you should set the different address of devices

To find out the CONNECT address you need to go **INFO/Hardware/CONNECT**, if there is no connected devices, you can set any address, if not, set any address except existing

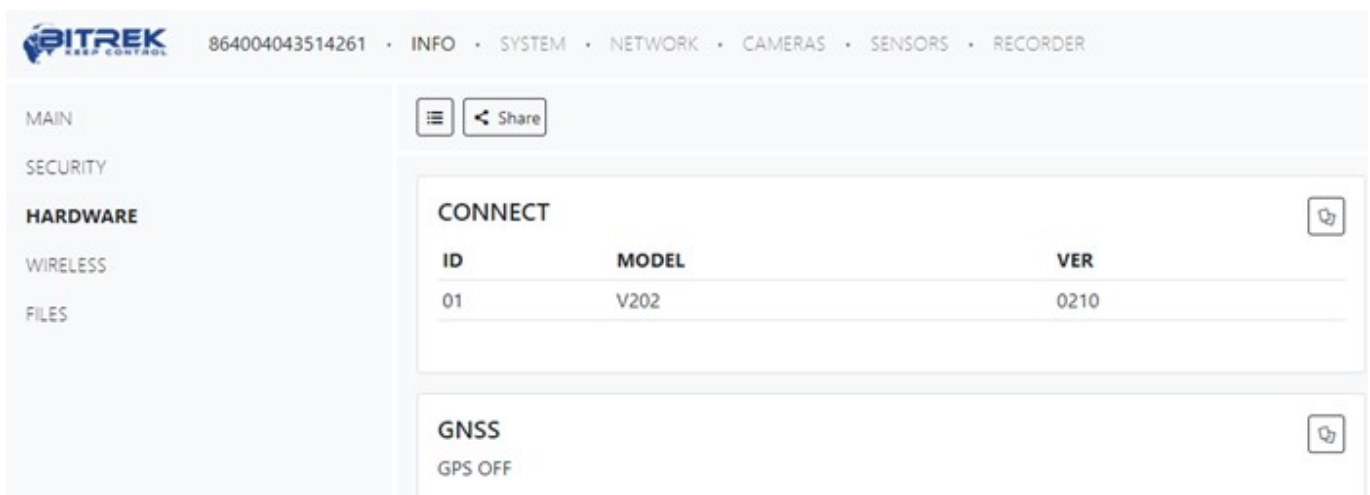

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:conectweb&rev=1713428953>

Last update: **2025/08/31 23:17**