## System CONNECT

In this chapter you can set the device connection by CONNECT bus, to do that, you need to choose CONNECT bus address of the device

	043514261 + NFO + SHSTEM + NETWORK + CAMERAS + SENSORS + RECORDER	DOT
SYSTEM MINUR TEST	III Stave Settings saved: never	🔒 Save settings ] 🖾 Default ] 🔳 Help ]
TRACKER	CONNECT settings	
CONNECT	Own address on the CONVICT bus 01	
ALERTS		

**ATTENTION!** Sometimes the address of devices can coincide, as the result will be conflict of the addresses and you won't be able to find out which of devices is yours, in this case you should set the different address of devices

To find out the CONNECT address you need to go **INFO/Hardware/CONNECT**, if there is no connected devices, you can set any address, if not, set any address except existing

864004043	514261 · INFO · SYST	EM • NETWORK • CAMERAS •	SENSORS · RECORDER	
MAIN	E Share	]		
HARDWARE	CONNEC	CONNECT		Ø
WIRELESS	ID	MODEL	VER	
FILES	01	V202	0210	
	GNSS GPS OFF			\$

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

