

# BITREK documentation

**Welcome to the BITREK documentation page! Here you can find answers to some technical questions and recommendations about installation, control and use of the device**

- Where to start?
- Installation tips
- How to get into the device cabinet?
- How to get into the control management system?
- How do I get to the device configuration menu?
- How to connect the Bitrek-Dahua camera?
- How do I connect a third-party camera?
- How do I view the live feed?
- How to view live broadcast on Wialon?
- How to enable tracker?
- How to configure FTP client?
- How to set up an FTP client in Linux Ubuntu?
- How to connect the device to an access point?
- How to connect the device to a router?
- How do I connect my device to the Internet via LAN?
- How do I add a VPN client?
- How do I browse files in the device's storage?
- How to choose a storage type?
- How do I set file deletion quotas in the storage?
- How do I set the reboot schedule?
- How do I set up a scheduled ignition sensor shutdown?
- How to set up a scheduled camera power off by ignition sensor?
- How do I set the name of the file created by the event?
- How to set file name created by recorder?
- How do I take a test photo or video?
- How to set CONNECT device address?
- How to connect the device to GSM/LTE network?
- How do I enable live streaming?
- How do I turn on Timelapse mode?
- How do I turn on eventcentered video mode?
- How do I add sensors?
- What are simple sensors?
- What is a complex sensor?
- How do I add an internal sensor?
- How to add a CAN sensor?
- How do I turn on the photo recorder?
- How do I turn on the video recorder?

From:  
<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:  
<https://docs.bitrek.video/doku.php?id=en:faq>

Last update: **2024/04/18 12:26**