

LAN configuration

Figure 1 - Chapter LAN configuration

LAN configuration ▢

Network type Static	
IP address 192.168.1.20	Network mask 255.255.255.0
Gateway	Internal DHCP state Enabled

Table 1 - LAN configuration parameter description

Parameter	Parameter description
Network type	Ethernet connection settings. Note that you need to use 10-100Base connectors and cables to connect via the Ethernet interface. When connected to a 1000Mbit network, the adapter may be damaged due to the twisted pair voltage transmission 12V interface
Тип мережі	Статична адреса яку ви задаєте за замовчуванням (192.168.1.20) або ж DHCP
IP address	IP address. To use the LAN as the Internet connection interface, the IP address must be different from 192.168.1.20 and the Gateway must be installed.
Gateway	Default gateway
Network mask	Allows to divide IP-address on two parts: number of network and number of device in this network.
DCHP state	Choose the state of IP address of the connected to the mNVR devices: static or random

 
Scan LAN

Scan LAN ▢

IP	MAC
No device was found in the LAN!	
Scanned on: 2021-12-17 09:38:10.000000000 +0200	
Clear report	Scan

LAN scanner allows to scan and find the devices your local network, to start the procedure press Start button, after scanning it will show the IP and MAC address of the device

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.



From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:lan>

Last update: **2024/04/18 12:26**