

# How do I connect my device to the Internet via LAN?

First, you need to connect the LAN cable to a free port of the device and to the router



After that you need to go to [device configuration](#), and go to the tab **Cameras/IPCameras**, where you need to remove the camera which was in the place where you connected the LAN if there is no such a camera you can skip this step

### IP camera 1 ✕

Leave the field empty for the default value

Power state ON	▼
Sound state OFF	▼
Name IP camera 1	
IP 192.168.1.10	
Gateway 192.168.1.20	
Max current, mA 600	
Manufacturer DAHUA	▼
Username admin	
Password admin1234	

Delete Discard Save

Then go to [device configuration menu](#) and go to the **Network/LAN** tab.

#### LAN configuration ▢

Network type Static	
IP address 192.168.1.20	Network mask 255.255.255.0
Gateway	Internal DHCP state Enabled

#### Scan LAN ▢

IP	MAC
No device was found in the LAN!	
Scanned on: 2021-12-17 09:38:10.000000000 +0200	
Clear report	Scan

Here you can configure the device connection via LAN, namely:

- network type (static address or DHCP, we advise to choose a static address to avoid looking for the device on the network)
- IP address
- Gateway (IP of the router)
- Subnet mask
- Internal DHCP status

You can also perform a **network scan** and the device can automatically find the data you need to fill in

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:lanconnect>

Last update: **2024/04/18 12:26**