


# How do I enable live streaming?

First you have to connect the cameras to the device



After that, you will need to go to [device configuration](#), go to the **Cameras/Live stream** tab

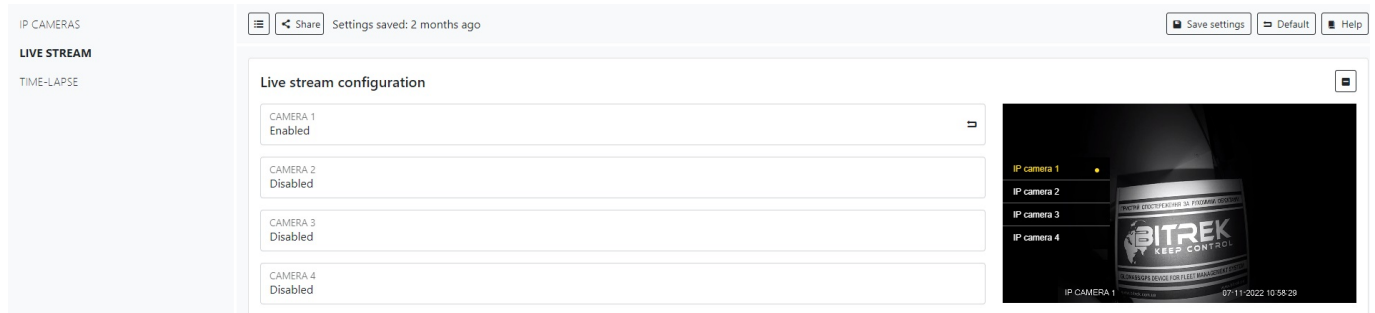

And **switch on** the connected camera (don't forget to press **save settings**), you will see the live camera image on the side

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:live>

Last update: **2024/04/18 12:26**