


LIVE STREAM

This section configures the ability to create a server streaming from IP cameras. Supported protocols are **DASH** and **HLS**.

Live stream configuration

Figure 1 - Live stream configuration

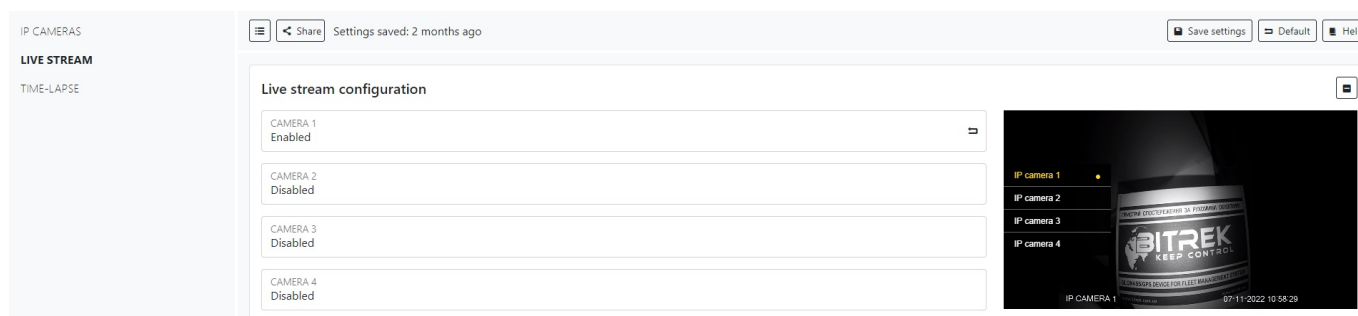

Here you can adjust the state of the streams from the camera cameras, turn on or off. **Note!** Then you can configure **ONLY** the streams **ON!**

Advanced configuration

Figure 2 - Advanced configuration

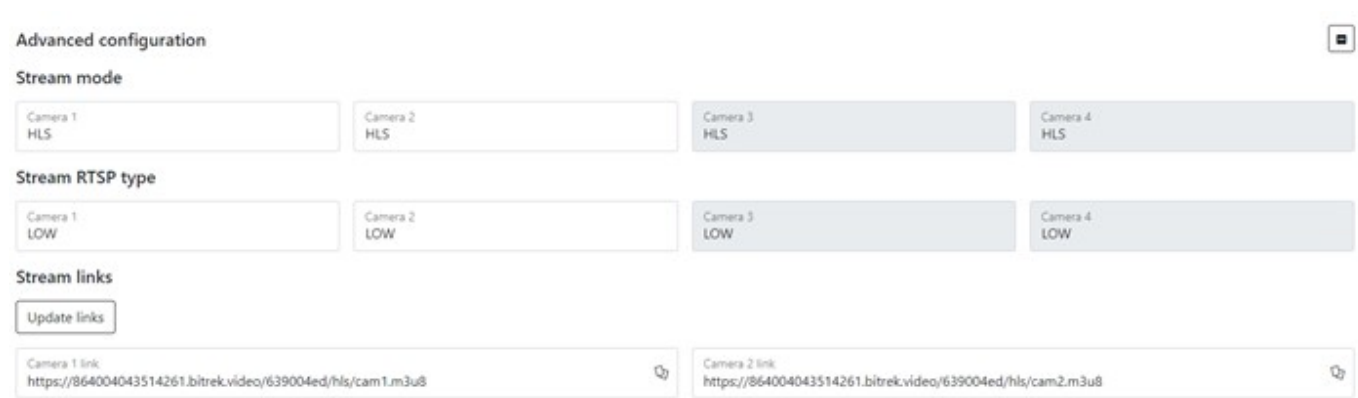


Table 1 - Advanced configuration parameters description

Parameter	Parameter description
Camera	Device camera number
HLS mode	Enable HLS server for the specified camera
DASH mode	Enable DASH server for the specified camera

Parameter	Parameter description
Stream RTSP type	Select the type of RTSP stream (first high-expansion stream, second low-expansion stream)
Stream links	Link to live broadcast from the camera

Note! You will not be able to update the link if no camera is turned on!

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:liveweb>

Last update: **2024/04/18 12:26**