

Video recorder

In this chapter you can set loop video recording, check and set the camera state, and interval between recordings, and select the quality of the video to be recorded.

Figure 1 – Chapter Loop video

The screenshot shows a web interface for a video recorder. At the top, it says "Video recorder" with a small square icon on the right. Below this, there are four sections, each for a camera: "Camera 1", "Camera 2", "Camera 3", and "Camera 4". Each camera section contains three input fields: "State" (all set to "Disabled"), "Time interval (s)" (all set to "300"), and "RTSP source" (all set to "LOW").

Table 1 – Loop video parameter description

Parameter	Parameter description
Interval (s)	The interval between which will record a cyclic video
RTSP source	The quality of loop video which will record

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:loopvideo>

Last update: **2024/04/18 12:26**