
How do I turn photo recorder on my DVR?

First you need to go to device configuration menu and go to the **Registrator/PhotoRegistrator** tab

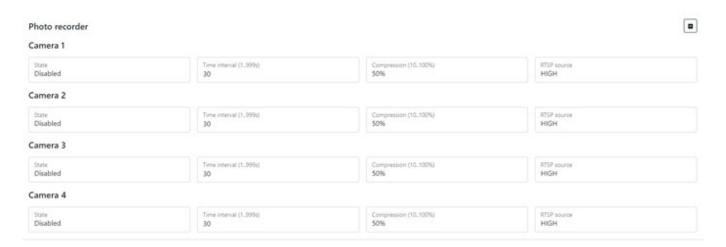

Here you can configure the recorder mode, namely:

- Choose **camera** which you want to turn on to the photo recorder (up to 4 cameras)
- Set **interval** between photos in seconds (from 1 to 999s)
- Set **Photo compression ratio** (10% to 100%, the higher the ratio the worse the photo quality, useful for saving bandwidth)
- Select **Source of RTSP stream** with which the photo will be transmitted (1 stream highest quality, 2 streams lowest quality)

From:

https://docs.bitrek.video/ - Bitrek Video Wiki

Permanent link:

https://docs.bitrek.video/doku.php?id=en:photorecorder

Last update: 2025/08/31 23:18