

# How do I set up a device reboot schedule?

You need to go to [device configuration menu](#) and go to the **System/System/System Reboot** tab

## System maintenance



Default storage  
microSD card

Storage file system format  
EXT4 (for Linux)

## Delete files policy

Storage used  
97%

Event files count  
500000

Files disk sharing  
20% event files | 80% recorder video files

## System reboot

Day of week  
Daily

Hour  
02

Minute  
01

## Ignition sensor

Sensor state  
Disabled

Timeout, s  
0

Ignition sensor state

0 - sensor disabled; 1..65000s - timeout

Camera power state configuration  
Disabled

Timeout, s  
0

Ignition ON - cams ON, ignition OFF - cams off

OFF timeout

You will be able to disable/enable the system reboot every day, certain or random day with the accuracy of a minute

From:  
<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:  
<https://docs.bitrek.video/doku.php?id=en:schedulereboot>

Last update: **2024/04/18 12:26**