

BITREK documentation

Welcome to the BITREK documentation page! Here you can find answers to some technical questions, recommendations for installation, operation, and device usage

- Getting Started
- Mounting Recommendations
- How to access the device cabinet?
- How to access the device configuration menu?
- How to connect a Bitrek-Dahua camera?
- How to connect cameras from other manufacturers?
- How to view live stream?
- How to view live stream on Wialon service?
- How to enable tracker?
- How to configure FTP client?
- How to configure FTP client in Linux Ubuntu OS?
- How to connect the device to an access point?
- How to connect the device to a router?
- How to connect the device to the internet via LAN?
- How to add VPN client?
- How to check files in device storage?
- How to choose storage type?
- How to configure deletion quotas for files in storage?
- How to schedule device reboot?
- How to schedule device shutdown by ignition sensor?
- How to schedule camera power off by ignition sensor?
- How to configure event-generated file name?
- How to configure recorder-generated file name?
- How to take a test photo or video?
- How to set up CONNECT device address?
- How to connect the device to GSM/LTE network?
- How to enable live streaming?
- How to enable Timelapse mode?
- How to enable event-centered video mode?
- What sensors can be added?
- What are simple sensors?
- What is a complex sensor?
- How to add an internal sensor?
- How to add a CAN sensor?
- How to enable photo recorder?
- How to enable video recorder?

From:
<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:
<https://docs.bitrek.video/doku.php?id=en:start>

Last update: **2024/04/18 14:08**