

BITREK documentation

Welcome to the BITREK documentation page! Here you can find answers to some technical questions, recommendations for installation, operation, and device usage

- [Getting Started](#)
- [Mounting Recommendations](#)
- [How to access the device cabinet?](#)
- [How to access the device configuration menu?](#)
- [How to connect a Bitrek-Dahua camera?](#)
- [How to connect cameras from other manufacturers?](#)
- [How to view live stream?](#)
- [How to view live stream on Wialon service?](#)
- [How to enable tracker?](#)
- [How to configure FTP client?](#)
- [How to configure FTP client in Linux Ubuntu OS?](#)
- [How to connect the device to an access point?](#)
- [How to connect the device to a router?](#)
- [How to connect the device to the internet via LAN?](#)
- [How to add VPN client?](#)
- [How to check files in device storage?](#)
- [How to choose storage type?](#)
- [How to configure deletion quotas for files in storage?](#)
- [How to schedule device reboot?](#)
- [How to schedule device shutdown by ignition sensor?](#)
- [How to schedule camera power off by ignition sensor?](#)
- [How to configure event-generated file name?](#)
- [How to configure recorder-generated file name?](#)
- [How to take a test photo or video?](#)
- [How to set up CONNECT device address?](#)
- [How to connect the device to GSM/LTE network?](#)
- [How to enable live streaming?](#)
- [How to enable Timelapse mode?](#)
- [How to enable event-centered video mode?](#)
- [What sensors can be added?](#)
- [What are simple sensors?](#)
- [What is a complex sensor?](#)
- [How to add an internal sensor?](#)
- [How to add a CAN sensor?](#)
- [How to enable photo recorder?](#)
- [How to enable video recorder?](#)

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:start>

Last update: **2025/08/31 23:18**