

How do I enable Timelapse mode?

First, you need to connect the cameras to the device



After that, you need to go to [device configuration menu](#), go to the tab **Cameras/Timelapse/Video Timelapse (content 3)**

Time-lapse video (content 3)				
<input checked="" type="checkbox"/>				
Camera 1				
State Disabled	Amount of photos (2..999) 10	Photos interval (10.9999s) 10	FPS (1..25) 1	RTSP source LOW
Camera 2				
State Disabled	Amount of photos (2..999) 10	Photos interval (10.9999s) 10	FPS (1..25) 1	RTSP source LOW
Camera 3				
State Disabled	Amount of photos (2..999) 10	Photos interval (10.9999s) 10	FPS (1..25) 1	RTSP source LOW
Camera 4				
State Disabled	Amount of photos (2..999) 10	Photos interval (10.9999s) 10	FPS (1..25) 1	RTSP source LOW

Here you can configure the creation of a timelapse , setting parameters such as the number of photos the camera will take in the timelapse and the time interval between them, the frame rate per second that will be played back and the video quality

From:

<https://docs.bitrek.video/> - Bitrek Video Wiki

Permanent link:

<https://docs.bitrek.video/doku.php?id=en:timelapse>

Last update: **2024/04/18 12:26**