

# How do I turn on the tracker?

First you need to connect the GPS module to your device



After that, you should enter the [device configuration menu](#) and go to the **System/Tracker** tab.



After you turn the tracker on, you can configure it to your needs: use GPS module or static coordinates, set the sending via IPS server and create a point by time distance and angle etc.

Tracker state: GPS OFF    Server state: NOT CONNECTED

GPS antenna input  
GNSS module

Send photo by IPS  
Disabled

Send link by IPS  
Enabled

Video path web link:  
https://ftp.bitrek.video/ftp/864004043514261/864004043514261/

Video path preset  
No selected

Server plates recognition  
Disabled

Live player

Server QR recognition  
Disabled

Local QR recognition  
Disabled

**Point creation settings**

By time state  
Enabled

By time value, s  
30

By distance state  
Enabled

By distance value, m  
500

By angle state  
Enabled

By angle value, deg  
5

Min speed, km/h  
5

**Accelerometer settings**

Accelerometer sensitivity  
Middle

Axis stop timeout, s  
180

You can also configure the IPS server itself, specifying its address, port, ID, etc., as well as view the current GPS information

IPS server settings

**Main server**

IP address  
193.193.165.165

Port  
21941

ID  
867648041547447

Password  
\*\*\*

Timeout  
60

**Standby server**

Standby server state  
Disabled

**Info**

LAT	LOX	MOVE	SPEED	ANGLE
NANA	NANA	STOP	0	0
DATA	TIME	HDOP	SATS	ALT
X-X-X	-:-	NA	-	-

Current GPS informations

From: <https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link: <https://docs.bitrek.video/doku.php?id=en:tracker>

Last update: **2024/04/18 12:26**

