

# BITREK documentation

**Welcome to the BITREK documentation page! Here you can find answers to some technical questions and recommendations about installation, control and use of the device**

- [Where to start?](#)
- [Installation tips](#)
- [How to get into the device cabinet?](#)
- [How to get into the control management system?](#)
- [How do I get to the device configuration menu?](#)
- [How to connect the Bitrek-Dahua camera?](#)
- [How do I connect a third-party camera?](#)
- [How do I view the live feed?](#)
- [How to view live broadcast on Wialon?](#)
- [How to enable tracker?](#)
- [How to configure FTP client?](#)
- [How to set up an FTP client in Linux Ubuntu?](#)
- [How to connect the device to an access point?](#)
- [How to connect the device to a router?](#)
- [How do I connect my device to the Internet via LAN?](#)
- [How do I add a VPN client?](#)
- [How do I browse files in the device's storage?](#)
- [How to choose a storage type?](#)
- [How do I set file deletion quotas in the storage?](#)
- [How do I set the reboot schedule?](#)
- [How do I set up a scheduled ignition sensor shutdown?](#)
- [How to set up a scheduled camera power off by ignition sensor?](#)
- [How do I set the name of the file created by the event?](#)
- [How to set file name created by recorder?](#)
- [How do I take a test photo or video?](#)
- [How to set CONNECT device address?](#)
- [How to connect the device to GSM/LTE network?](#)
- [How do I enable live streaming?](#)
- [How do I turn on Timelapse mode?](#)
- [How do I turn on eventcentered video mode?](#)
- [How do I add sensors?](#)
- [What are simple sensors?](#)
- [What is a complex sensor?](#)
- [How do I add an internal sensor?](#)
- [How to add a CAN sensor?](#)
- [How do I turn on the photo recorder?](#)
- [How do I turn on the video recorder?](#)

From:

<https://docs.bitrek.video/> - **Bitrek Video Wiki**

Permanent link:

<https://docs.bitrek.video/doku.php?id=start&rev=1713359532>

Last update: **2024/04/17 16:12**