## How to view the live broadcast on Wialon?

First, go to device configuration cabinet

In the token of quick access section, press the IP camera button and copy **dash** link to the desired camera by clicking on it:

Cabinet-IP cameras	× +										✓ - ∅ ×	
PITREK	86764804156016	8 · DEVICE · IP (	CAMERAS   PLAYERS ·	CLOUD STORAGE	LIVE VIDEO      TE	elemetry • recorder	R · SOFT · DO	CUMENTATION			EXIT	
IP camera 1 Live video			IP camera 2 Live video			IP camera 3 Live video			IP camera 4 Live video			
Q7 hls	🛛 dash	Live HLS	🗘 hls	🗘 dash	Live HLS	🗘 hls	🗘 dash	Live HLS	© hls	🗘 dash	Live HLS	
Camera settings			Camera settings			Camera settings			Camera settings			
D WEB	🕼 RTSP	Go to WEB	C WEB	🗘 RTSP	Go to WEB	C WEB	C RTSP	Go to WEB	D WEB	C RTSP	Go to WEB	
Access WEB	Access RTSP		Access WEB	Access RTSP     Access			Access WEB Access RTSP			Access WEB     Access RTSP		
BROADCAST MULTIPLE STREAMS AT A TIME			BROADCAST ONE STREAM AT A TIME				¢ EINTERNET } =	*				
Single-user live video player Player for streaming video directly from the device. The recommended number of concurrent users is up to 2. The player can be used as a source of streaming video for the player of monitoring servers, for example Wialon or Aurora. If there is no streaming video, check the streaming video settings in the device interface CAMERA-> LIVE BROADCAST			Single-user one stream live video player Player for streaming video directly from the device. Only one camera will be playing at the same time, the streams from the others will be paused to save traffic. The recommended number of concurrent users is up to 2. The player can be used as a source of streaming video for the player of monitoring servers, for example Wialon or Aurora. If there is no streaming video, check the streaming video settings in the device interface CAMERA-> LIVE BROADCAST			Multi-user live video player A streaming video player using a relay server. The recommended number of concurrent users is up to 10. The player can be used as a source of streaming video for the player of monitoring servers. for example Wialon or Aurora. If there is no streaming video, check the streaming video settings in the device interface CAMERA-> LIVE BROADCAST						
Ø		Go		B		Go		B		Go		

Then go to wialon.com enter your login and password and press LOG IN.

A William V			
← → C  hosting.wialon.com		or 🛊 a 6	● <b>★ ●</b> :
A C A forting wildow.com	Werr:       Deression         Desenora       Deression         Derension       Derension         Derension       Derension         Derension       Derension         Derension       Derension         Derension       Derension         Derension       Derensin         Derension		

From here you will see the main menu of Wialon Service, on the left you will see the list of available devices. To receive live broadcasts from them you need to press the button of the flip-down list (**open additional options**) and press the icon of key (**open properties diaolog**).



A window will open where you should enter the name of the unit (by default - **MDVR Module (3G) BITREK**) and press the key icon(**configure device for the unit**).

Vialon	× +		0 0 2
← → C	nosting.wialon.com		or q ★ 💿 🌐 🗯 🙆 E
🔘 winlon	🚱 Monitoring 🏁 Tracks 🗐 Mess	eessages 🗟 Reports 🖉 John 🔃 Natifications 😂 Vieter 🔗 Users 💂 Units	📐 🏭 i MegaDVR
<ul> <li>С. шіліоп</li> <li>Ф. Беллі.</li> <li>Ф. М. Ц. Т. Ж.</li> <li>Ф. П. М. МОКЕ</li> <li>Ф. ОК. ТЕБТ</li> <li>Ф. ОК. ТЕБТ</li> <li>Ф. БЕЛО, АОРО</li> </ul>		<pre>merce @ feqce @ do do</pre>	
17 H			

In this window in the RTMP IP field you have to insert the link copied from bitrek.video and press OK.



Then you can close the dialog boxes and click the camera icon near the desired device (live view).



Done! You have successfully set up the live broadcast on Wialon.

From: https://docs.bitrek.video/ - **Bitrek Video Wiki** Permanent link: https://docs.bitrek.video/doku.php?id=en:livewialon

Last update: 2024/04/18 13:51