How do I enable live streaming?

First you have to connect the cameras to the device

After that, you will need to go to device configuration, go to the **Cameras/Live stream** tab

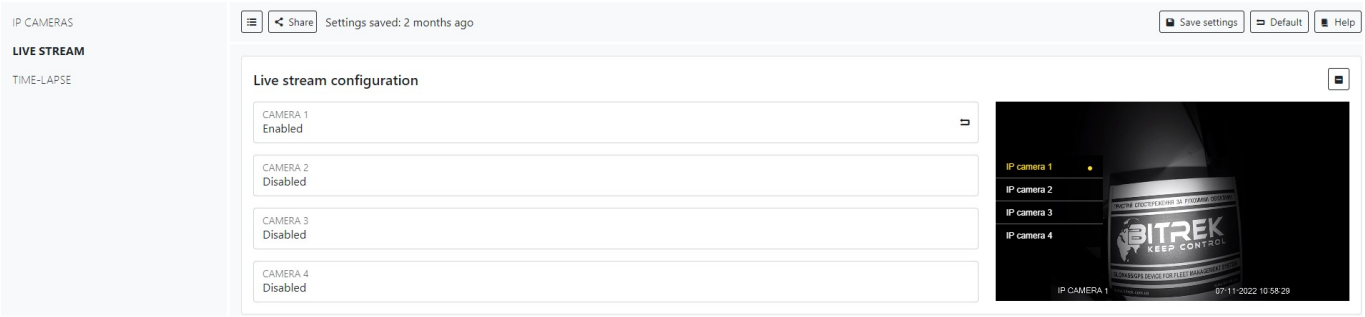

And **switch on** the connected camera (don't forget to press **save settings**), you will see the live camera image on the side

From:
https://docs.bitrek.video/ - **Bitrek Video Wiki**

Permanent link:
https://docs.bitrek.video/doku.php?id=en:live

Last update: **2025/08/31 23:18**