Email

In this chapter you can set message sending on your email.

Figure 1 – Chapter Email configurations

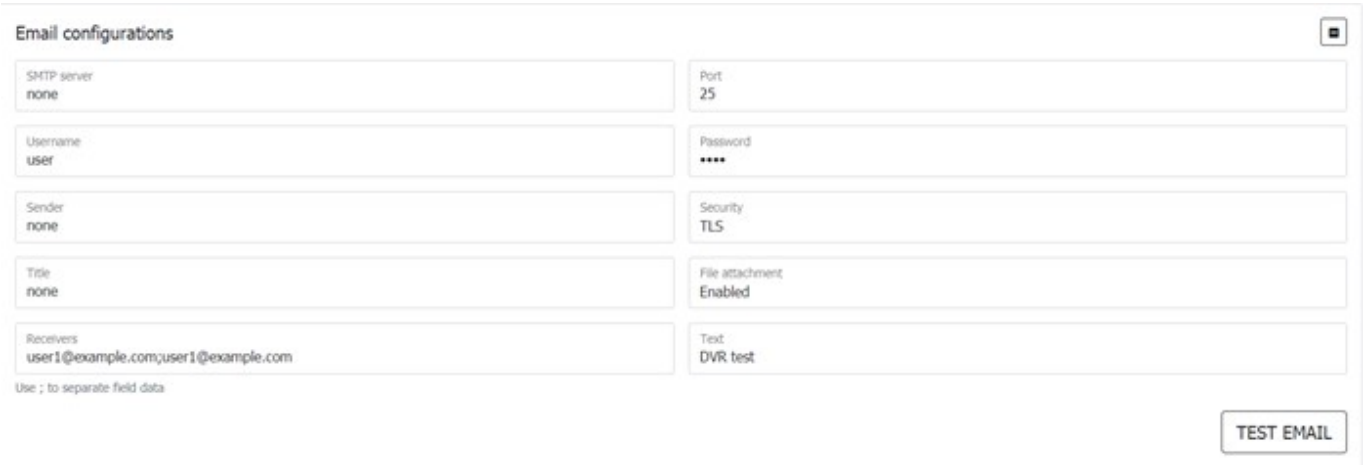

Table 1 – the parameter description of Email configuration chapter

Parameter	**Parameter description**
SMTP server	SMTP server
Port	SMTP port
Security	Security type (TLS SSL or unsecured)
Title	Email subject
File attachment	Attach to email
Receivers	The address of the mailbox to which the letter will be sent
Text	Text, which wiil be send

To set the default settings, click the **Default** button. To save settings in NVR click **Save settings** button.

From:
https://docs.bitrek.video/ - **Bitrek Video Wiki**

Permanent link:
https://docs.bitrek.video/doku.php?id=en:email

Last update: **2025/08/31 23:18**