How do I set up a scheduled ignition sensor shutdown?

You need to go to device configuration menu, and go to the **System/System/Ignition Sensor** tab

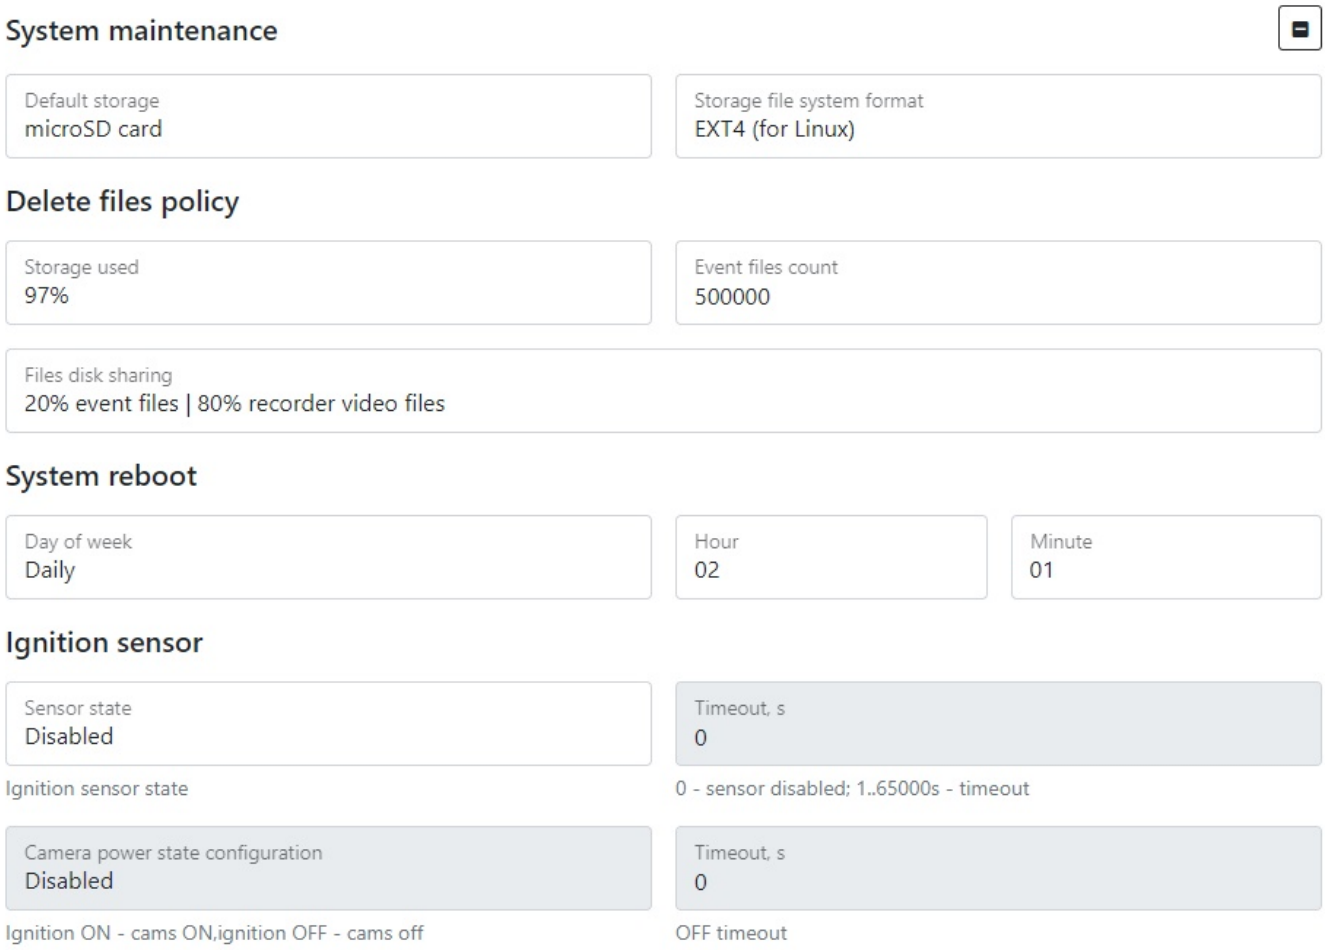

Here you can configure the ignition sensor shutdown of the device by selecting the desired time interval. If the value is >0 and there is no ignition after the specified time interval, the device will disconnect. This sensor allows you to connect the device directly to the battery.

From:
https://docs.bitrek.video/ - **Bitrek Video Wiki**

Permanent link:
https://docs.bitrek.video/doku.php?id=en:sheduleignitionreboot

Last update: **2025/08/31 23:18**