
RS02 module of the BITREK CONNECT system

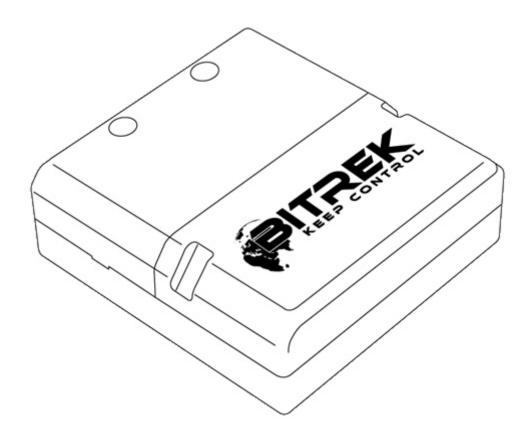

Device assignment

The RS02 module (firmware "GPS") of the Bitrek Connect system is communication device and is designed to provide communication with any external GPS system for precision farming that equipped with a configurable RS-232 interface.

Package Contents

The RS02 module of the Bitrek Connect system comes in the following complete set:

- RS02 module 1 pc;
- Data sheet 1 pc;
- Warranty card 1 pc;
- Packing box 1 pc;
- Micro Fit 4-pin cable 1 pc;
- Micro Fit 6-pin cable 1pc;
- Rubber gasket 3pc.


Device specifications

Technical characteristics of the device are presented in Table 1.

Table 1: Technical specifications of the device

Nº	Parameters	Characteristics
1	Power supply voltage	from 9 V to 36 V
2	Consumption current	20 mA
3	connection interface	RS-232
4	Operating temperature range	-30°C to +80°C
5	Allowable humidity	80 ± 15%
6	Dimensions	(W \times D \times H) 78 \times 83 \times 30 mm
7	Weight	130 g
8	housing protection class	IP44

Appearance and dimensions of the device

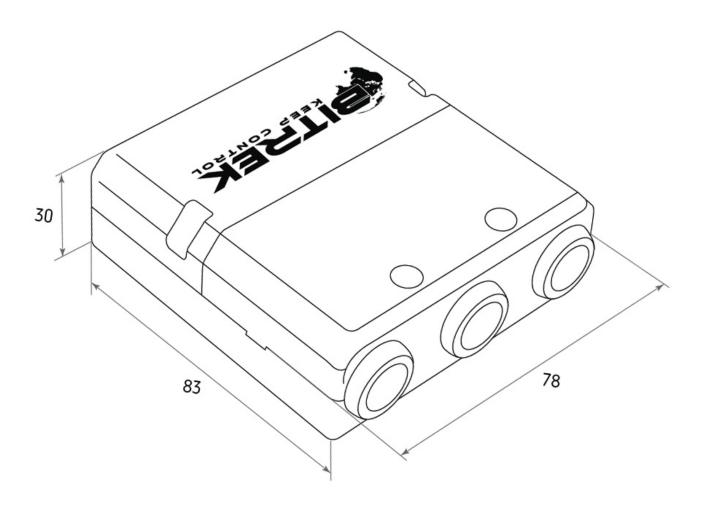

https://docs.bitrek.video/ Printed on 2025/09/08 12:41

Fig.1. Appearance and dimensions

Pin assignment

The CN03 module is equipped with three Micro-Fit connectors (Fig. 2).



Fig.2. The appearance of the connectors

The four-pin connectors (Fig. 3) are Connect-Bus connectors, which have the power outputs of the module and the outputs signal lines of the bus.

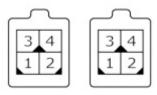


Fig.3. Connect-Bus connectors #1 and #2

The pinout of the Connect-Bus connectors is shown in Table 2.

Table 2 The pin-out of the Connect-Bus connectors No.1 and No.2

Nº	Pin name	Signal type	Pin assignment
1	GND	Power supply	General lead (ground)
2	CAN L	Input/output	Signal "CAN_L" of the CAN bus
3	+ Vin	Power supply	"+" On-board power supply (nominal voltage 12 V or 24 V)
4	CAN H	input/output	signal "CAN_H" on the CAN bus

The six-pin connector (Fig.4) is the connector for the "CAN-Log" connector. It has power outputs and signal lines of the RS-232.



Fig.4. Connector for connecting "CAN-Log"

The connector pinout for connecting "CAN-Log" is presented in of the "CAN-Log" connector is presented in Table 3.

Table 3: Connector pinout for connecting "CAN-Log".

N	Contact name	Signal type	Pin assignment
1	RX D	Input/Output	RS-232 interface RX signal
2	+ Vin	Power	"+" output of onboard power supply (for power supply to external devices)

Nº	Contact name	Signal type	Pin assignment
3	GND	power supply	common wire (ground)
4			RS-232 TX interface signal
5	+ Vin	power supply	output "+" on-board power supply (for power supply to external devices)
6	GND	power supply	common wire (ground)

Description of indications

On the front panel of the module on the connector side there are two LEDs that indicate the current status of the device.

Red LED - Illuminates when the Connect-Bus Connect-Bus connection is active;

Green LED - blinks if there is RS-232 communication

GPS Antenna Setup

The RS02 module of Bitrek Connect uses the RS-232 interface, the module receives data from the precision agriculture antenna. The module transmits the received data to the Connect-Bus.

The module is capable of receiving data from various antennas of Precision farming and parallel driving systems. The prerequisite is an unoccupied RS-232 interface that can be The main condition is that there is an unoccupied RS-232 interface that can be configured by the user.

Configuring the RS-232 interface of an external GPS system configuration comes down to:
- setting the protocol type - NMEA - setting the frequency of data transmission - from 1 to 10 Hz - NMEA strings transmitted: GGA, VTG, RMC\\. - the RS232 interface speed must match one of the following options: 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 56000, 57600, 115200.

In the RS02 settings, you must specify the speed that speed set on the external GPS system.

Connecting GPS antenna to RS02 module

The GPS antenna is connected to the RS02 module via RS-232 interface: The RX signal of the antenna is connected to the TX of the RS02 module, and vice versa (see Table 5.)

Table 5. Antenna connection to RS-02 module

SEO CAN-LOG	Connect	RS02 module			
Pin name	nme Pin number Pin r		Pin name		
RS 232 Rx	⇔	4	TX D		
RS 232 Tx	⇔	1	RX D		
GND	⇔	3 or 6	GND		

https://docs.bitrek.video/ Printed on 2025/09/08 12:41

SEO CAN-LOG	Connect	RS02 module		
+ Vin	⇔	5 or 2	+ Vin	

Please note that connecting the antenna power supply to the RS-02 module outputs is for information purposes only. It is not obligatory. Antenna power supply must be constant and not disappear during operation of the vehicle. vehicle operation. Consequently, connection is allowed at any convenient point.

RS02 module configuration

The RS02 module has a number of configurable parameters of which are listed in Appendix 1. To configure the module module is configured using the Bitrek Connect configurator module, as well as Connect Configurator software. How to work with the configurator module and The software is described in detail in the document "General guide to organizing and configuring Bitrek Connect. General guide to organizing and configuring Bitrek Connect system" document.

Configuration of the module boils down to setting the correct speed of data exchange via RS-232 interface. The speed can be set based on the following options: 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 56000, 57600, 115200. The selected speed of the external GPS system must correspond to the one selected in module settings.

Next you need to configure the Connect tracker, namely: you must select the RS02 module as the source for GPS coordinates, because the default setting is the tracker's built-in antenna by default.

To do this, in the Connect tracker, go to Settings \Rightarrow Service. Service and in the parameter 0201 specify the address of the RS02 module on the Connect-Bus (see Fig. 5).

Figure 5. Selecting the source of coordinate determination



Next, set parameter 0202 "Type of GPS receiver used Receiver Type" to the value "Both antennas, priority - external". When This setting will use GPS coordinates as the priority. coordinates from the precision farming antenna will be used as the priority, but in case of loss of GPS signal from precision farming antenna disappears, the tracker will switch to its own.

Appendix 1 . Device parameters

No	Parameter name	ID when configured	Parameter digit	Parameter assignment	Default value
1	CANSlaveAddr	0200	1 byte	device address on Connect - Bus	4
2	DevicePIN	0400	2 bytes	Device access password	11111
3	BaudRate	0403	2 bytes	RS-232 data rate	9600
4	MinGPSSpeed	0918	2 bytes	minimum GPS speed	5

No	Parameter name ID when configured Parameter digit Parameter assignment		Parameter assignment	Default value	
5	GPSErrSatNum	0992	I hyto	number of satellites when GPS signal is lost	0
6	MaxHDOP	0998	2 bytes	Maximum HDOP	500

Addendum 2. List of variables translated to Connect-Bus

Nº	Parameter name	Width	PGN	Start Bit	Bit Total	Timeout
1	Device model	4	18F713	0	32	10
2	Software version	4	18F713	32	32	10
3	module operating time	4	18F712	0	32	10
4	number of module starts	4	18F712	32	32	10
5	Latitude	4	18FEF3	0	32	5
6	Longitude	4	18FEF3	32	32	5
7	Azimuth	2	18FEE8	0	16	5
8	Speed	2	18FEE8	16	16	5
9	Pitch	2	18FEE8	32	16	5
10	Height	2	18FEE8	48	16	5

From:

https://docs.bitrek.video/ - Bitrek Video Wiki

Permanent link:

https://docs.bitrek.video/doku.php?id=en:rs02_gps

Last update: 2025/08/31 23:18

https://docs.bitrek.video/ Printed on 2025/09/08 12:41